

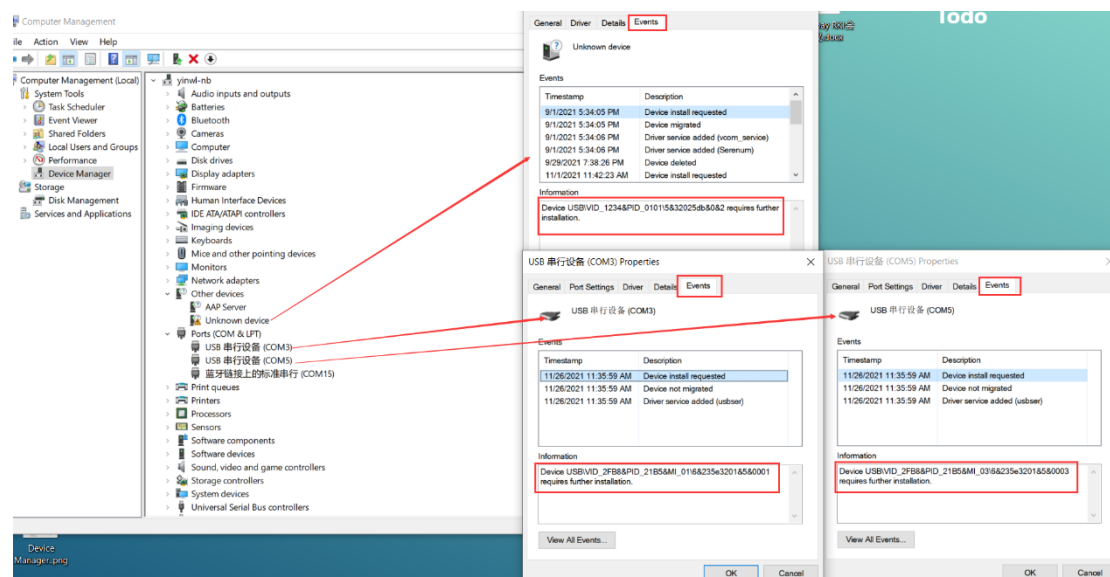


**Step 1:** Before you start the installation, please connect the terminal with PC, and obtain information in the below picture (copy them down), then unplug the terminal with PC.

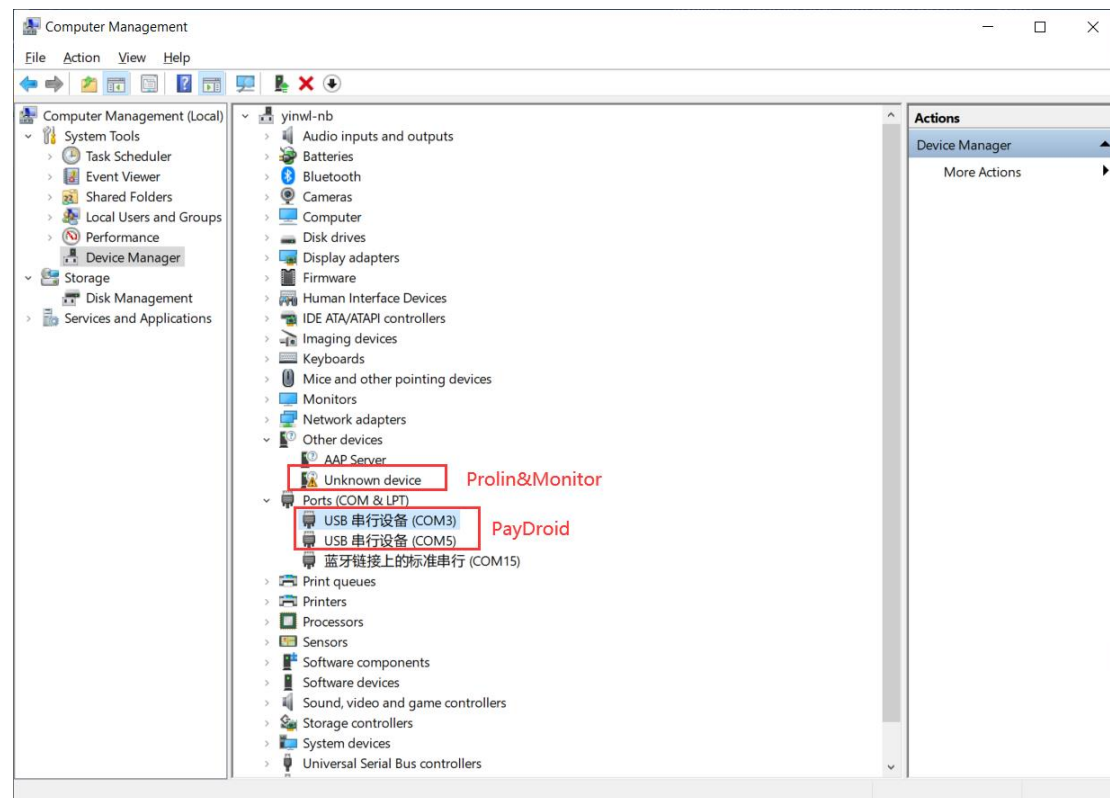

**Step 2:** Enter the driver directory, using the below commands to uninstall the old driver fist, then install the new version.

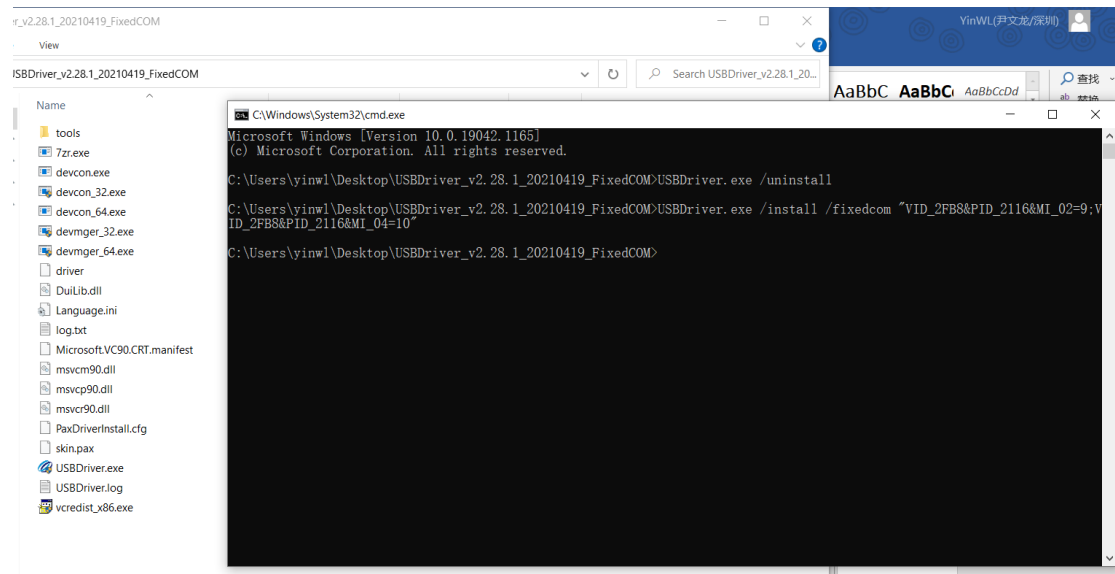

## 1. Uninstalling:

**USBDriver.exe /uninstall**

## 2. Install the new driver: (use the information you obtained in the step 1)

**For Prolin or Monitor:**

**All:**

**USBDriver.exe /install /com 6**

**Or**

**Specific terminal model:**

**USBDriver.exe /install /fixedcom "VID\_1234&PID\_0101=6"**

**For PayDroid:**

**USBDriver.exe /install /fixedcom " VID\_2FB8&PID\_21B5&MI\_01=9;VID\_2FB8&PID\_21B5&MI\_03=10"**

**For Prolin, Monitor & PayDroid:**

**USBDriver.exe /install /fixedcom**

**"VID\_1234&PID\_0101=6;VID\_2FB8&PID\_21B5&MI\_01=9;VID\_2FB8&PID\_21B5&MI\_03=10"**

(Set the com port number of VID\_1234&PID\_0101 to COM6, VID\_2FB8&PID\_21B5&MI\_01 to COM9 and VID\_2FB8&PID\_21B5&MI\_03 to COM10)